



MAMOD STEAM WAGON GAS UNIT INSTALATION

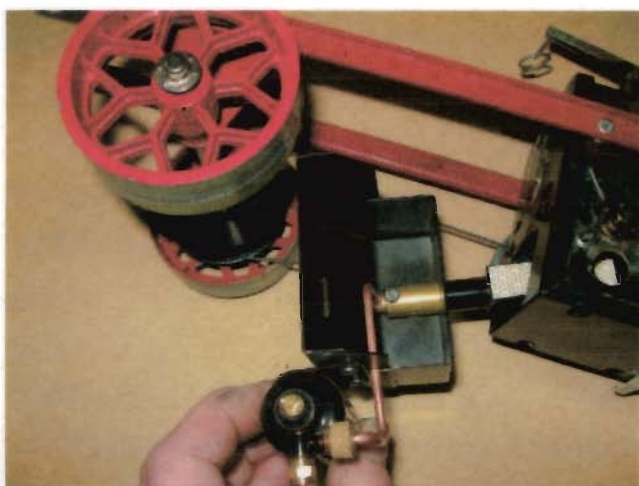

TURN THE UNIT THROUGH 90 deg. TO FIT
INTO THE FIREBOX, AS SHOWN



FIT SCUTTLE INTO WAGGON

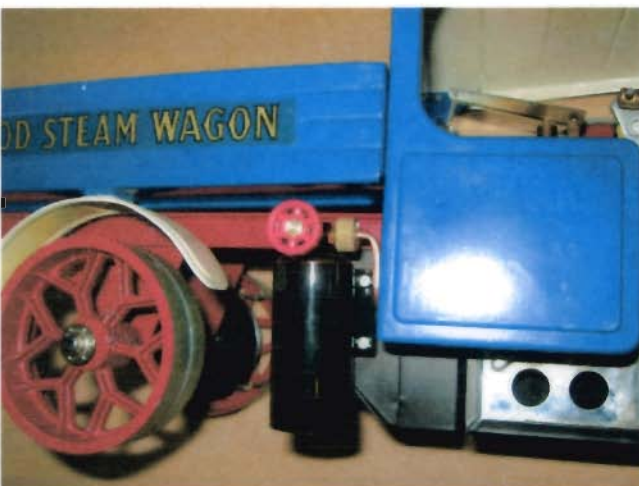

CHECK TANK VALVE IS TURNED OFF AND
CONNECTION IS TIGHT, FILL TANK WITH GAS
(BUTANE OR 70/30 BUTANE PROPANE MIX)
BEFORE LIGHTING BURNER READ AND FOLLOW
THE SAFETY AND USAGE INSTRUCTIONS ATTACHED.
TO LIGHT BURNER USE A COOKER LIGHTER THROUGH
THE HOLES IN BOTTOM OF FIREBOX. HOLD FLAME
ABOVE THE BURNER AND TURN ON GAS SLOWLY
CONTINUE FOLLOWING MAMOD INSTRUCTIONS.